

Reference Manager

The speedy - Reference Manager is used to view and manage document references.

With the help of the reference manager, file references can be exchanged very easily and comfortably.

References of assemblies can also be exchanged within the speedy explorer without having to start the CAD system.

The reference manager can be accessed in the ribbon bar under

Document→Properties→Reference Manager can be started.

The reference documents for the previously selected document are now displayed.

alte Version	Aktion	Neue Version	Ersetzt durch	Dokumenttyp	Benennung 1	Benennung 2	Status
<all>	<all>	<all>	<all>	<all>	<all>	<all>	<all>
	Belassen	0.1		Einzelteil	SPACER		Abgelegt
	Belassen	0.1		Einzelteil	CAMERAMOUNT		Abgelegt
	Belassen	0.1		Einzelteil	BASE		Abgelegt
	Belassen	0.1		Einzelteil	LIPO		Abgelegt
	Belassen	0.1		Einzelteil	SMACOUPLER		Abgelegt
	Belassen	0.1		Einzelteil	RECEIVER		Abgelegt
	Belassen	0.1		Einzelteil	MALESMA		Abgelegt
	Belassen	0.1		Einzelteil	CAMERASWIVEL		Abgelegt
	Belassen	0.1		Einzelteil	PLUG		Abgelegt
	Belassen	0.1		Einzelteil	ANTENNA		Abgelegt
	Belassen	0.1		Einzelteil	VTX		Abgelegt
	Belassen	0.1		Einzelteil	TOP		Abgelegt
	Belassen	0.1		Einzelteil	ARM		Abgelegt
	Belassen	0.1		Einzelteil	BODYSPACER		Abgelegt
	Belassen	1.0		Einzelteil	SPACER		Freigegeben
	Belassen	1.0		Einzelteil	SPACER		Freigegeben
	Belassen	1.0		Einzelteil	SPACER		Freigegeben
	Belassen	1.0		Einzelteil	SPACER		Freigegeben
	Belassen	3.1		Einzelteil	Platine		Freigegeben
	Belassen	3.1		Einzelteil	Bursterloser Motor		Freigegeben
	Freigabe:	2.0		Einzelteil	Hülse		Freigegeben

The currently used version and the latest version of the documents can now be viewed.

If the new version differs from the current version, the reference can be updated to the current version.

All differences in the properties and also in the versions are marked in colour.

In the lower part of the dialogue under **Apply action for all references** an automatic update to the latest version or an update to the latest release can be done.

If an asterisk (*) is displayed behind the „Version used“, the version used is not the release but the current version. * is displayed behind the „Version used“, the version used is not the release but the

current version (in the case of a new version, this reference is adopted).



The reference manager is also available in the CAD systems (Solidworks, Inventor). Here you can manage the references of the currently opened assembly.

Settings

Setting	Description
document.refmanager.closeautomatic	Specifies whether the dialogue should be closed automatically after the reference swap.

From:
<https://wiki.speedy-pdm.de/> - **speedyPDM - Wiki**

Permanent link:
https://wiki.speedy-pdm.de/doku.php?id=en:speedy:10_explorer:25_referencemanager

Last update: **2023/01/25 07:04**

