

Reference Manager

The speedy - Reference Manager is used to view and manage document references.

With the help of the reference manager, file references can be exchanged very easily and comfortably.

References of assemblies can also be exchanged within the speedy explorer without having to start the CAD system.

The reference manager can be accessed in the ribbon bar under

Document→Properties→Reference Manager can be started.

The reference documents for the previously selected document are now displayed.

Dokument-Nr.	Verwendete Version	Aktion	Neue Version	Ersetzt durch	Dokumenttyp	Benennung 1	Benennung 2	Status
E-000024	0.1	Belassen	0.1		Einzelteil	SPACER		Abgelegt
E-000025	0.1	Belassen	0.1		Einzelteil	CAMERAMOUNT		Abgelegt
E-000026	0.1	Belassen	0.1		Einzelteil	BASE		Abgelegt
E-000027	0.1	Belassen	0.1		Einzelteil	LIPO		Abgelegt
E-000028	0.1	Belassen	0.1		Einzelteil	SMACOUPLER		Abgelegt
E-000029	0.1	Belassen	0.1		Einzelteil	RECEIVER		Abgelegt
E-000030	0.1	Belassen	0.1		Einzelteil	MALESMA		Abgelegt
E-000031	0.1	Belassen	0.1		Einzelteil	CAMERASWIVEL		Abgelegt
E-000032	0.1	Belassen	0.1		Einzelteil	PLUG		Abgelegt
E-000033	0.1	Belassen	0.1		Einzelteil	ANTENNA		Abgelegt
E-000034	0.1	Belassen	0.1		Einzelteil	VTX		Abgelegt
E-000035	0.1	Belassen	0.1		Einzelteil	TOP		Abgelegt
E-000036	0.1	Belassen	0.1		Einzelteil	ARM		Abgelegt
E-000037	0.1	Belassen	0.1		Einzelteil	BODYSPACER		Abgelegt
E-000022	0.1	Belassen	0.1		Einzelteil	Hülse		Freigegeben
E-000028	0.1	Belassen	0.1		Einzelteil	Abgewinkeltes Metall		Freigegeben
E-000019	1.0	Freigegeben	2.0		Einzelteil	Hülse		Freigegeben

The currently used version and the latest version of the documents can now be viewed.

If the new version differs from the current version, the reference can be updated to the current version.

All differences in the properties and also in the versions are marked in colour.

In the lower part of the dialogue under **Apply action for all references** an automatic update to the latest version or an update to the latest release can be done.

If an asterisk (*) is displayed behind the „Version used“, the version used is not the release but the current version. * is displayed behind the „Version used“, the version used is not the release but the current version (in the case of a new version, this reference is adopted).



The reference manager is also available in the CAD systems (Solidworks, Inventor). Here you can manage the references of the currently opened assembly.

Settings

Last update: 2023/01/25 07:04 en:speedy:10_explorer:25_referencemanager https://wiki.speedy-pdm.de/doku.php?id=en:speedy:10_explorer:25_referencemanager

Setting	Description
document.refmanager.closeautomatic	Specifies whether the dialogue should be closed automatically after the reference swap.

From:
<https://wiki.speedy-pdm.de/> - **speedyPDM - Wiki**

Permanent link:
https://wiki.speedy-pdm.de/doku.php?id=en:speedy:10_explorer:25_referencemanager

Last update: **2023/01/25 07:04**

